



Quick reference tuning guide

True Wind Speed	Cap tension	Turns *	mm	Chain Plate hole	Lower tension	Turns *	mm	Chain Plate hole	Mast Step	Chocks ^
0-8	13	-3.5		#1	Slack	-3		#3	Aft 10mm	10-15mm behind
9-12 (Base)	17	0		#2	7	0		#4	Base	Neutral (Float)
13-18	21	+4		#2	13	+3		#4	Fwd 5mm	10mm front
19+	24	+8		#2	19	+6		#4	Fwd 10mm	25mm - to max front
Knots	Loos PT-2	* Turns from base (check for your boat)	Calibration (measure thread distance on your boat)	From bow	Loos PT-2	* Turns from base (check for your boat)	Calibration (measure thread distance on your boat)	From bow	Base 5360mm	^ Measures from Neutral. Neutral is floating position of mast at deck with slack out of forestay (5 on Loos)

Notes:

Dock rig measurement position - measure rig with chocks taken out and backstay tension taking forestay up to be straight (5 on Loos)

Rake 1170mm (From black band position marked on forestay)

Spinnakers

VMG 0-11 knots TWS

BR/FR 9-20 knots TWS (.5BR) -> 25+ (.75BR)

Do not use leeward barber haul

For more information about North Sails on your Etchells please contact your local representative:

office@au.northsails.com

Sydney (02) 9997 5966 - Micheal Coxon, Julian Plante

Melbourne (03) 9534-0363 - Ross Lloyd

Brisbane (07) 3883-3464 - Vaughan Prentice, Mark Bradford

WA agent 0411 742 111 - Skip Lissiman

Updated Feb 2009